rond

floor box Ø60
installation instruction

1

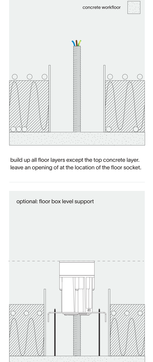

build up all floor layers except the top concrete layer, leave an opening of at the location of the floor socket.

optional: floor box level support

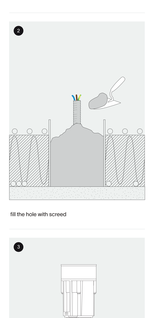

optional use floor box level support:

version	SKU	dimensions
single	8800-2525	100x100 mm
double	8800-2526	200x100 mm

2

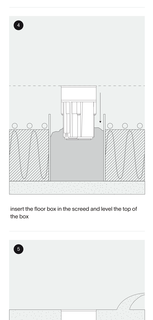

fill the hole with screed

3

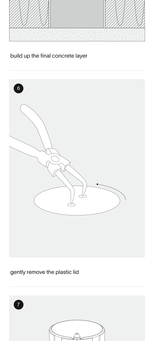

insert preflex in the floor box - cabling through bottom

4

insert the floor box in the screed and level the top of the box

5

build up the final concrete layer

6

gently remove the plastic lid

7

connect the socket (not included) and click it in the holder
compatible with **trimless** retro/easy/backfit type EJF socket modules

8

insert the showring

9

install the cover plate Ø60 of choice (sold separately)

10

for access remove the cover plate with a plug

thank you for choosing rond

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrong/all use of if installed personnel attempts to repair a product.